






#### SIMILAR VIDEO TUTORIAL

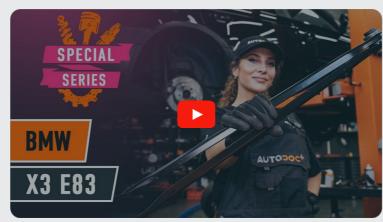

This video shows the replacement procedure of a similar car part on another vehicle

### (i) Important!

This replacement procedure can be used for:

BMW 3 Convertible (E36) 320i 2.0, BMW 3 Convertible (E36) 325i 2.5, BMW 3 Convertible (E36) 318i 1.8, BMW 3 Convertible (E36) M3 3.0, BMW 3 Convertible (E36) 328i 2.8, BMW 3 Convertible (E36) 323i 2.5, BMW 3 Convertible (E36) M3 3.2

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: BMW X3 (E83) 2.5 i

CLUB.AUTODOC.CO.UK 1–12







## REPLACEMENT: REAR SUSPENSION LOWER CONTROL ARM – BMW 3 CONVERTIBLE (E36). TOOLS YOU NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Torque wrench
- Combination spanner #18
- Drive socket # 18

- Wheel impact socket #17
- Ratchet wrench
- Pin punch
- Hammer
- Crow bar
- Hydraulic transmission jack
- Wheel chock

**Buy tools** 

CLUB.AUTODOC.CO.UK 2-12







### Replacement: rear suspension lower control arm – BMW 3 Convertible (E36). AUTODOC experts recommend:

- The replacement procedure is identical for the left and right lower control arms.
- All work should be done with the engine stopped.

# REPLACEMENT: REAR SUSPENSION LOWER CONTROL ARM – BMW 3 CONVERTIBLE (E36). USE THE FOLLOWING PROCEDURE:

- Secure the wheels with chocks.
- Loosen the wheel mounting bolts. Use wheel impact socket #17.



Raise the rear of the car and secure on supports.



Unscrew the wheel bolts.



CLUB.AUTODOC.CO.UK 3-12







#### **AUTODOC** recommends:

Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts.
 BMW 3 Convertible (E36)





Clean all joints of the arm. Use a wire brush. Use WD-40 spray.



Make a mark on the camber adjustment bolt.



Unscrew the fastener connecting the control arm to the rear knuckle. Use a combination spanner #18. Use a drive socket #18. Use a ratchet wrench.



CLUB.AUTODOC.CO.UK 4-12







Clean all joints of the arm. Use a wire brush.



Remove the fastening bolt. Use a drive socket #18. Use a crowbar.



Unscrew the fastener connecting the control arm to the subframe. Use a drive socket #18. Use a crowbar.



Support the rear knuckle. Use a hydraulic transmission jack.



Remove the fastening bolts. Use a pin punch. Use a hammer. Use a crowbar. Use a combination spanner #18.



13

CLUB.AUTODOC.CO.UK 5-12







14 Remove the arm.



Clean the mounting seats and the thread of the suspension arm. Use a wire brush. Use WD-40 spray.



16 Install a new arm.



#### **AUTODOC** recommends:

- Replacement: rear suspension lower control arm BMW 3 Convertible (E36). Use only new bolts and nuts for installation.
- Do not damage the ball joint cover.

CLUB.AUTODOC.CO.UK 6-12







Install the control arm fasteners. Use a combination spanner #18. Use a crowbar.



Adjust the position of the alignment bolt according to the mark.



Screw in the fasteners connecting the control arm to the rear knuckle. Use a combination spanner #18. Use a drive socket #18. Use a ratchet wrench.



Raise the hydraulic transmission jack by 10-15 cm.

20



CLUB.AUTODOC.CO.UK 7–12







Tighten the fastener connecting the control arm to the rear knuckle. Use a combination spanner #18. Use a drive socket #18. Use a torque wrench. Tighten it to 100 Nm torque.



Tighten the fastener connecting the control arm to the subframe. Use a drive socket #18. Use a torque wrench. Tighten it to 77 Nm torque.



Remove the support from under the rear knuckle.



#### **AUTODOC** recommends:

Replacement: rear suspension lower control arm – BMW 3 Convertible (E36).
 Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.

CLUB.AUTODOC.CO.UK 8-12







Treat all joints of the arm. Use copper grease.



Clean the wheel rim mounting seat. Use a wire brush.



Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



Clean the brake disk surface. Use a brake cleaner.



#### AUTODOC recommends:

Replacement: rear suspension lower control arm – BMW 3 Convertible (E36).
 After applying the spray, wait a few minutes.

CLUB.AUTODOC.CO.UK 9-12







28 Install the wheel.

30



#### **AUTODOC** recommends:

- Important! Hold the wheel while screwing in the fastening bolts. BMW 3 Convertible (E36)
- Screw in the wheel bolts. Use wheel impact socket #17.



Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 140 Nm torque.



CLUB.AUTODOC.CO.UK 10-12