





SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

i Important!

This replacement procedure can be used for: BMW 3 Coupe (E36) 318is 1.8, BMW 3 Coupe (E36) 320i 2.0, BMW 3 Coupe (E36) 325i 2.5, BMW 3 Coupe (E36) 328i 2.8, BMW 3 Coupe (E36) 323i 2.5

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: BMW 3 Saloon (E36) 323i 2.5

CLUB.AUTODOC.CO.UK 1–13







REPLACEMENT: ENGINE THERMOSTAT – BMW 3 COUPE (E36). AUTODOC RECOMMENDS:



- All-purpose cleaning spray
- Sealant
- Torque wrench
- Drive socket # 7
- Drive socket # 10
- Drive socket # 13
- Ratchet wrench

- Clip removal tool
- Seal scraper
- Flat screwdriver
- Funnel
- Fluid container
- Fender cover

Buy tools

CLUB.AUTODOC.CO.UK 2-13







Replacement: engine thermostat – BMW 3 Coupe (E36). Tip from AUTODOC:

- Check the condition of the coolant every time you replace the thermostat. Change the coolant if necessary.
- Please note: all work on the car BMW 3 Coupe (E36) should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

- Open the hood.
- Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.
- Remove the fasteners of the air duct housing. Use a clip removal tool.
- Remove the air distribution housing assembly.



5 Unscrew the coolant reservoir cap.



CLUB.AUTODOC.CO.UK 3-13







6 Prepare a container for fluids.



Open the coolant drain tap.



Drain the coolant from the engine.



Replacement: engine thermostat – BMW 3 Coupe (E36). AUTODOC experts recommend:

- Caution! The coolant can be very hot.
- Wear gloves to prevent contact with hot liquid.
- All work should be done with the engine stopped.
- Wait until the coolant has completely flowed out of the drain hole.

CLUB.AUTODOC.CO.UK 4–13







9 Close the coolant drain tap.



Loosen the clamps of the coolant hoses. Use a drive socket #7. Use a ratchet wrench.



Detach the coolant hose.



Loosen the coolant hose clamp. Use a drive socket #7. Use a ratchet wrench.



Detach the coolant hose.



CLUB.AUTODOC.CO.UK 5-13







Detach the coolant pipe bracket. Use a drive socket #13. Use a ratchet wrench.



Unscrew the thermostat housing fasteners. Use a drive socket #10. Use a ratchet wrench.



Clean the thermostat housing fasteners. Use all-purpose cleaning spray.



Unscrew the thermostat housing fasteners. Use a drive socket #10. Use a ratchet wrench.



17

CLUB.AUTODOC.CO.UK 6-13







18 Remove the thermostat housing.



AUTODOC recommends:

- Replacement: engine thermostat BMW 3 Coupe (E36). To avoid damaging the part when removing it, do not use excessive force.
- Caution! Coolant may leak out of the coolant lines and thermostat housing.

19 Remove the thermostat.

20



Clean the thermostat housing mounting seat. Use a flat screwdriver. Use a seal scraper. Use all-purpose cleaning spray.



CLUB.AUTODOC.CO.UK 7–13








21 Install a new thermostat.



Treat the thermostat housing mounting seat. Use a sealant.



23 Install the new thermostat housing.

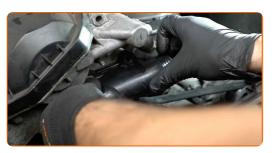

AUTODOC recommends:

• Replacement: engine thermostat – BMW 3 Coupe (E36). Do not use excessive force during installation. This may damage the part.

CLUB.AUTODOC.CO.UK 8-13







Tighten the thermostat housing fasteners. Use a drive socket #10. Use a torque wrench. Tighten it to 7 nm torque.



Attach the coolant pipe bracket. Use a drive socket #13. Use a torque wrench. Tighten it to 11 nm torque.



- Tighten the thermostat housing fasteners. Use a drive socket #10. Use a torque wrench. Tighten it to 7 nm torque.
- Clean the thermostat housing fasteners. Use all-purpose cleaning spray.



Connect the coolant hoses to the thermostat housing.



CLUB.AUTODOC.CO.UK 9-13







Fasten the clamps of the coolant hoses. Use a drive socket #7. Use a ratchet wrench.



Remove the coolant reservoir cap.



31 Insert the funnel.



Pour coolant in the coolant reservoir.



CLUB.AUTODOC.CO.UK 10-13