





SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

i Important!

This replacement procedure can be used for:

BMW 5 Touring (E39) 520i 2.0, BMW 5 Touring (E39) 523i 2.5, BMW 5 Touring (E39) 540i 4.4, BMW 5 Touring (E39) 528i 2.8, BMW 5 Touring (E39) 530d 3.0, BMW 5 Touring (E39) 525tds 2.5, BMW 5 Touring (E39) 520d 2.0, BMW 5 Touring (E39) 525d 2.5, BMW 5 Touring (E39) 520i 2.2, BMW 5 Touring (E39) 525i 2.5, BMW 5 Touring (E39) 530i 3.0

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: BMW 5 Saloon (E39) 520i 2.0

CLUB.AUTODOC.CO.UK 1–15







REPLACEMENT: BRAKE PADS – BMW 5 TOURING (E39). LIST OF THE TOOLS YOU'LL NEED:



- Wire brush
- All-purpose cleaning spray
- Brake cleaner
- Anti-squeal paste
- Copper grease
- HEX bit no.H7.
- Wheel impact socket #17

- Ratchet wrench
- Torque wrench
- Brake caliper wind back tool
- Crow bar
- Fender cover
- Wheel chock

Buy tools

CLUB.AUTODOC.CO.UK 2-15








Replacement: brake pads – BMW 5 Touring (E39). AUTODOC experts recommend:

- Perform the replacement of brake pads in complete set for each axis. This provides effective braking.
- The replacement procedure is identical for all brake pads on the same axle.
- All work should be done with the engine stopped.

REPLACEMENT: BRAKE PADS – BMW 5 TOURING (E39). RECOMMENDED SEQUENCE OF STEPS:

- Open the bonnet.
- Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.
- Detach the air duct from the cabin filter housing.

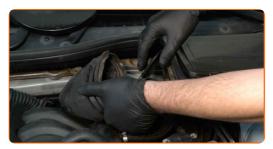

Release the cabin filter cover clips.



CLUB.AUTODOC.CO.UK 3-15







Remove the cabin filter housing cover.



Remove the cabin filter housing seal.



Remove the cabin air filter housing.



8 Unscrew the brake fluid reservoir cap.



9 Secure the wheels with chocks.



CLUB.AUTODOC.CO.UK 4-15







Loosen the wheel mounting bolts. Use wheel impact socket #17.



- Raise the rear of the car and secure on supports.
- 12 Unscrew the wheel bolts.



Replacement: brake pads – BMW 5 Touring (E39). Tip:

- To avoid injury, hold up the wheel when unscrewing the bolts.
- Remove the wheel.



CLUB.AUTODOC.CO.UK 5-15







Disconnect the brake pads wear sensor. Use a crowbar.



Please note!

- Some cars are not equipped with the brake pad wear sensor.
- Remove the dust boot caps of the brake caliper guide pins. Use a crowbar.



Unscrew the brake caliper fastening. Use HEX No.H7. Use a ratchet wrench.



Spread the brake pads. Use a crowbar.



CLUB.AUTODOC.CO.UK 6-15







Detach the brake caliper retaining spring. Use a crowbar.



19 Remove the brake caliper.



Replacement: brake pads – BMW 5 Touring (E39). AUTODOC recommends:

- Tie the caliper to the suspension or to the body with a wire without disconnecting from the brake hose to prevent depressurization of the brake system.
- Make sure that the brake caliper is not hanging on the brake hose.
- Don't press the brake pedal after the brake caliper has been removed. As a result, the piston can fall out from the brake cylinder, and brake fluid leakage and depressurization of the system may occur.
- Check the brake caliper bracket, brake caliper guide pins and boots. Clean them.
 Replace, if necessary.


CLUB.AUTODOC.CO.UK 7-15







Remove the brake pads.

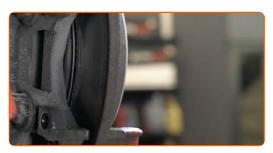

AUTODOC recommends:

 Measure the brake disc thickness. Upon reaching the wear limit the part must be replaced.

Treat the brake caliper piston. Use a brake cleaner.



Replacement: brake pads – BMW 5 Touring (E39). Tip from AUTODOC:

• After applying the spray, wait a few minutes.

Press in the brake caliper piston. Use brake caliper wind back tool.



CLUB.AUTODOC.CO.UK 8-15







Clean the brake caliper bracket from dirt and dust. Use a wire brush. Use all-purpose cleaning spray.



Treat the brake pads in the area where their surface comes into contact with the brake caliper bracket. Use antisqueal paste.



AUTODOC recommends:

• Make sure the disc surface is clean before installing the pads.

25 Install new brake pads.



AUTODOC recommends:

• Make sure the pads are installed with linings facing the disc.

CLUB.AUTODOC.CO.UK 9-15







Install the brake caliper and fix it. Use HEX No.H7. Use a torque wrench. Tighten it to 30 Nm torque.



Install the dust boot caps of the brake caliper guide pins.



Connect the brake pads wear sensor.



29 Install the brake caliper retaining spring.

30



Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



CLUB.AUTODOC.CO.UK 10-15