


VIDEO TUTORIAL

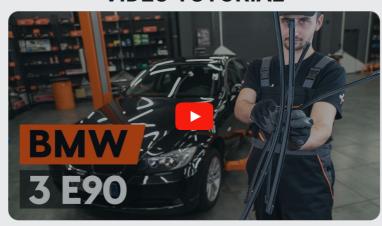

i Important!

This replacement procedure can be used for:

BMW X5 (E70) xDrive 30 d, BMW X5 (E70) xDrive 40 d, BMW X5 (E70) xDrive 35 i, BMW X6 (E71, E72) xDrive 30 d, BMW X6 (E71, E72) xDrive 40 d, BMW 3 Touring (E91) 325i 3.0, BMW 3 Touring (E91) 318d 2.0, BMW X6 (E71, E72) ActiveHybrid, BMW 3 Saloon (E90) 318d 2.0, BMW X5 (E70) xDrive 50 i, BMW 3 Touring (E91) 318i 2.0, BMW 3 Touring (E91) 316d 2.0, BMW 3 Saloon (E90) 320d xDrive 2.0, BMW 3 Saloon (E90) 320i 2.0, BMW 3 Saloon (E90) 325i 2.5, (+ 62)

The steps may slightly vary depending on the car design.

CLUB.AUTODOC.CO.UK 1-8



REPLACEMENT: WINDSHIELD WIPERS – BMW E90. TOOLS YOU MIGHT NEED:



Flat screwdriver

Microfibre towel

BUY TOOLS

CLUB.AUTODOC.CO.UK 2-8



Replacement: windshield wipers – BMW E90. Tip from AUTODOC:

- Always replace front wiper blades together. It will ensure efficient and uniform cleaning of the windshield.
- Don't confuse the wiper blades of the driver and passenger side.
- The replacement procedure for both wiper blades is identical.
- All work should be done with the engine stopped.

REPLACEMENT: WINDSHIELD WIPERS – BMW E90. RECOMMENDED SEQUENCE OF STEPS:

Switch on the ignition. Pull the windscreen wiper stalk to the downward position.



Switch off the ignition. In the service mode, the wipers will be in the upper position.



Prepare the new windscreen wipers.

CLUB.AUTODOC.CO.UK 3-8





Pull the wiper arm away from the glass surface until it stops.



Remove the windscreen wiper arm nut cover.

6



Turn the wiper blade by ninety degrees. Remove the blade from the wiper arm.



Replacement: windshield wipers – BMW E90. Tip from AUTODOC experts:

• When replacing the wiper blade, take caution to prevent the spring-loaded wiper arm from hitting the glass.

CLUB.AUTODOC.CO.UK 4-8







Install the new wiper blade and carefully press the wiper arm down to the glass.



Replacement: windshield wipers – BMW E90. AUTODOC recommends:

- Don't touch the wiper blade at the working rubber edge to prevent damage to the graphite coating.
- 8 Install the windscreen wiper arm nut cover.



Switch on the ignition. Pull the windscreen wiper stalk to the downward position. By doing so, you will switch the windscreen wipers from the service mode to the operation mode.



CLUB.AUTODOC.CO.UK 5-8





Replacement: windshield wipers - BMW E90. Tip:

• Ensure that the blade rubber strip fits tightly to the glass along the entire length.

10


After installation check the wipers performance. The blades shouldn't intersect or bump against the windshield seal.






VIEW MORE TUTORIALS

CLUB.AUTODOC.CO.UK 6-8

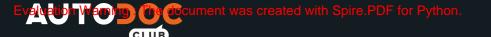



AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

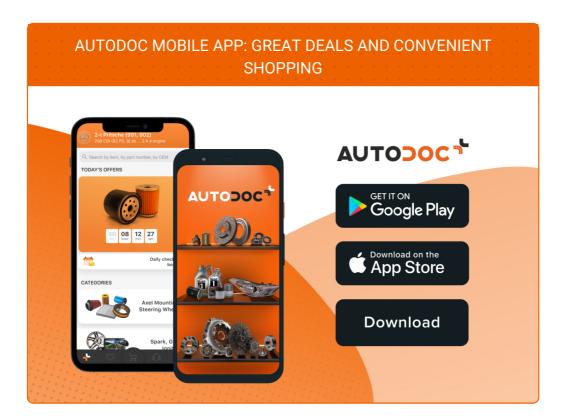

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR BMW

WINDSHIELD WIPERS: A WIDE SELECTION

CLUB.AUTODOC.CO.UK 7-8