

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!

This replacement procedure can be used for:

BMW 3 Compact (E46) 316ti 1.8, BMW 3 Compact (E46) 325ti 2.5, BMW 3 Compact (E46) 318ti 2.0, BMW 3 Compact (E46) 320td 2.0, BMW 3 Compact (E46) 318td 2.0, BMW 3 Compact (E46) 316ti 1.6, BMW 3 Compact (E46) 318Ti 2.0

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: BMW 3 Convertible (E46) 318Ci 2.0

REPLACEMENT: STRUT MOUNT – BMW 3 COMPACT (E46). LIST OF THE TOOLS YOU'LL NEED:



- Wire brush
- WD-40 spray
- Copper grease
- Combination spanner #17
- Drive socket # 13
- Drive socket # 18
- Wheel impact socket #17
- Ratchet wrench
- Torque wrench
- Adjustable wrench
- Tap wrench
- Crow bar
- Vice
- Hydraulic transmission jack
- Wheel chock

Buy tools

Replacement: strut mount – BMW 3 Compact (E46). AUTODOC experts recommend:

- The replacement procedure is identical for the mounts of the right and left shock absorbers of the rear suspension.
- Both mounts of the rear shock struts should be replaced simultaneously.
- All work should be done with the engine stopped.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1

Press and hold the folding roof control switch. Hold the button pressed until you get access to the upper fasteners of the shock absorber.

2

Remove the shock strut mount caps. Use a crowbar.



3

Clean the fasteners of the shock absorber upper mount. Use WD-40 spray.



4

Loosen the upper fastener of the shock absorber. Use a drive socket #13. Use a ratchet wrench.




5

Secure the wheels with chocks.



6

Loosen the wheel mounting bolts. Use wheel impact socket #17.

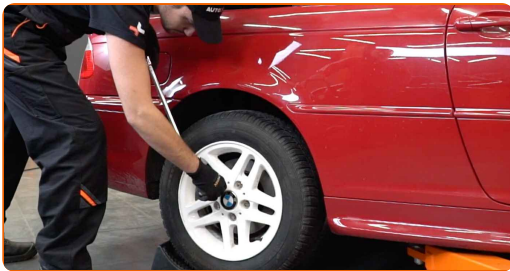


7

Raise the rear of the car and secure on supports.

8

Unscrew the wheel bolts.

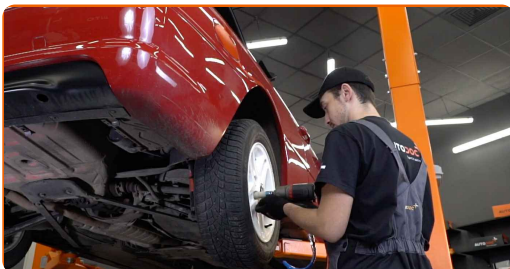

AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts.
BMW 3 Compact (E46)


9

Remove the wheel.




10

Support the arm. Use a hydraulic transmission jack.

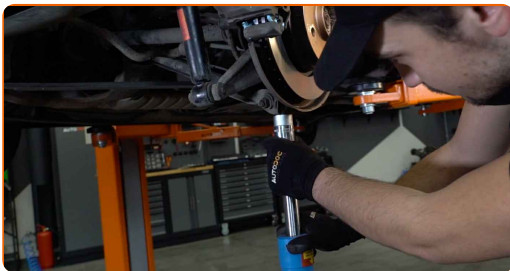


11

Clean the shock absorber fasteners. Use a wire brush. Use WD-40 spray.

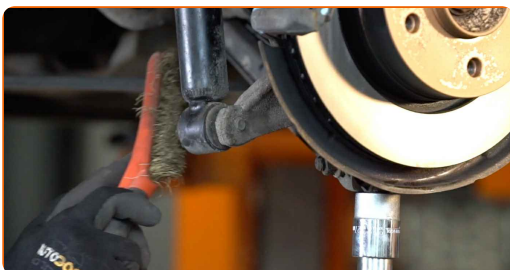


12

Unscrew the lower fastener of the shock absorber. Use a drive socket #18. Use a tap wrench.

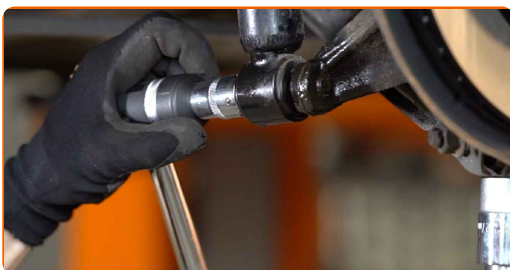

13

Unscrew the upper fastener of the shock absorber. Use a drive socket #13. Use a ratchet wrench.

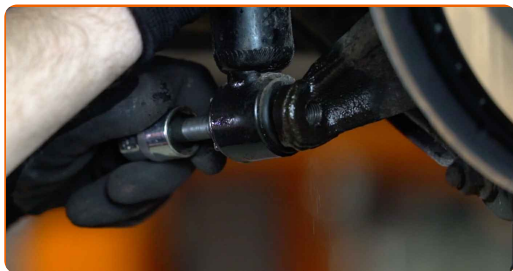

Replacement: strut mount – BMW 3 Compact (E46). AUTODOC recommends:

- To avoid injuries, hold the shock absorber when undoing the fastening bolts.

14

Remove the fastening bolt.




15

Remove the shock absorber.



16

Grip the shock absorber in a vice.

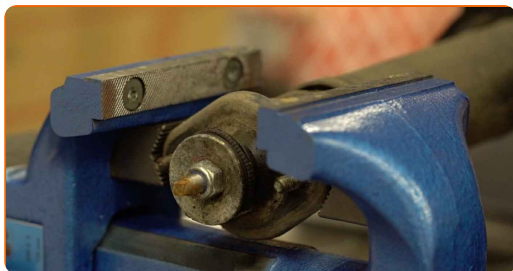


- 17 Clean the shock absorber rod fastener. Use a wire brush.



- 18 Remove the shock absorber piston rod fastening. Use a combination spanner #17.



- 19 Release the vice and take out the shock absorber.

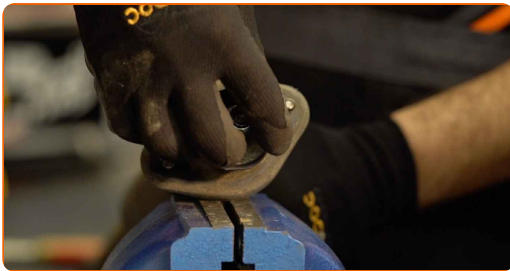

- 20 Remove the shock absorber mount, boot and bump stop.




Replacement: strut mount – BMW 3 Compact (E46). Tip from AUTODOC:

- Examine the shock absorber dust cap and the bump stop. Replace them if necessary.


21

Install the new mount, boot, and bump stop on the shock absorber.

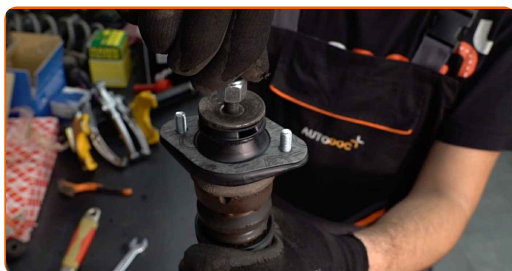


22

Grip the shock absorber in a vice.

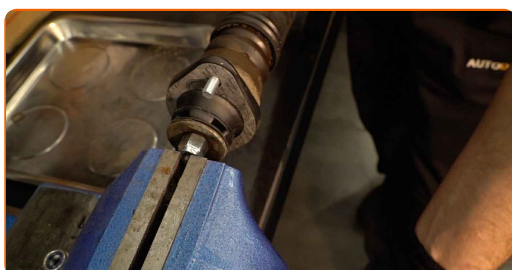


23

Screw the shock strut piston rod upper fastening. Use a combination spanner #17. Use an adjustable wrench. Use a torque wrench. Tighten it to 20 Nm torque.

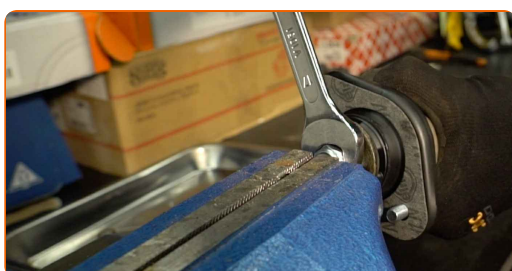

24

Release the vice and take out the shock absorber.

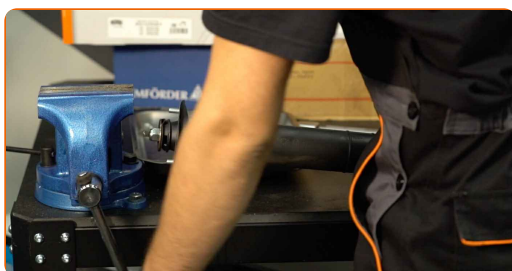

25

Clean the shock absorber mounting seats. Use a wire brush. Use WD-40 spray.



26

Place the shock absorber in the wheel arch and secure it.



AUTODOC recommends:

- Important! Hold the shock absorber while screwing in the fastening bolts. BMW 3 Compact (E46)

27

Screw the upper fastener of the shock absorber. Use a drive socket #13.




28

Tighten the lower fastener of the shock absorber. Use a drive socket #18. Use a torque wrench. Tighten it to 100 Nm torque.



29

Remove the support from under the arm.

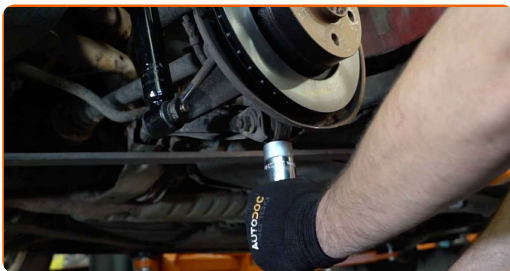

AUTODOC recommends:

- Replacement: strut mount – BMW 3 Compact (E46). Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.

30

Clean the wheel rim mounting seat. Use a wire brush. Treat the contacting surface. Use copper grease.



31

Install the wheel.



Replacement: strut mount – BMW 3 Compact (E46). Professionals recommend:

- To avoid injury, hold up the wheel when screwing in the fastening bolts.