






#### **VIDEO TUTORIAL**

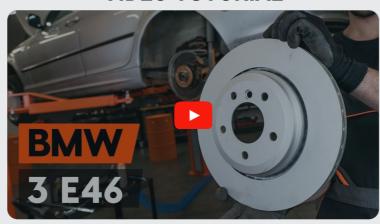

## i Important!

This replacement procedure can be used for:

BMW 3 Saloon (E46) 330d 2.9, BMW 3 Touring (E46) 330d 2.9, BMW 3 Touring (E46) 330xd 2.9, BMW 3 Saloon (E46) 330xd 2.9, BMW 3 Saloon (E46) 330xi 3.0, BMW 3 Touring (E46) 330xi 3.0, BMW 3 Touring (E46) 330xi 3.0, BMW 3 Touring (E46) 330ci 3.0, BMW 3 Saloon (E46) 325i 2.5, BMW 3 Saloon (E46) 325xi 2.5, BMW 3 Coupe (E46) 330Cd 3.0, BMW 3 Saloon (E46) 330xd 3.0, BMW 3 Saloon (E46) 330xd 3.0, BMW 3 Touring (E46) 330xd 3.0, (+ 2)

The steps may slightly vary depending on the car design.

CLUB.AUTODOC.CO.UK 1–17







## REPLACEMENT: BRAKE DISCS – BMW E46 TOURING. LIST OF THE TOOLS YOU'LL NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Torx bit T30
- Drive socket # 16
- HEX bit No.H7.
- Wheel impact socket #17

- Ratchet wrench
- Torque wrench
- Brake caliper wind back tool
- Tap wrench
- Impact screwdriver
- Rubber mallet
- Crow bar
- Wheel chock

**BUY TOOLS** 

CLUB.AUTODOC.CO.UK 2-17







#### Replacement: brake discs – BMW E46 touring. AUTODOC experts recommend:

- Replace the brake disks on the car BMW E46 touring in complete set for each axis. Regardless of the state of components. This will ensure even braking.
- The replacement procedure is identical for both brake disks on the same axle.
- When changing the brake discs, always replace the brake pads.
- All work should be done with the engine stopped.

# REPLACEMENT: BRAKE DISCS – BMW E46 TOURING. USE THE FOLLOWING PROCEDURE:

1

Open the bonnet. Unscrew the brake fluid reservoir cap.



2

Secure the wheels with chocks.



CLUB.AUTODOC.CO.UK 3-17







Loosen the wheel mounting bolts. Use wheel impact socket #17.



Raise the rear of the car and secure on supports.



Unscrew the wheel bolts.



#### **AUTODOC** recommends:

 Important! Hold the wheel while unscrewing the fastening bolts. BMW E46 touring

6 Remove the wheel.



CLUB.AUTODOC.CO.UK 4–17







Remove the dust boot caps of the brake caliper guide pins. Use a crowbar.



Spread the brake pads. Use a crowbar.



Unscrew the brake caliper fastening. Use HEX No.H7. Use a ratchet wrench.



Detach the brake caliper retaining spring. Use a crowbar.



10

CLUB.AUTODOC.CO.UK 5-17







11 Remove the brake caliper.



### Replacement: brake discs – BMW E46 touring. Tip:

- Tie the caliper to the suspension or to the body with a wire without disconnecting from the brake hose to prevent depressurization of the brake system.
- Make sure that the brake caliper is not hanging on the brake hose.
- Don't press the brake pedal after the brake caliper has been removed. As a result, the piston can fall out from the brake cylinder, and brake fluid leakage and depressurization of the system may occur.
- Remove the brake pads. Use a crowbar.
- Disconnect the brake pads wear sensor. Use a crowbar.



CLUB.AUTODOC.CO.UK 6-17








#### Please note!

• Some cars are not equipped with the brake pad wear sensor.





Unscrew the caliper bracket fastening. Use a drive socket #16. Use a ratchet wrench. Use a tap wrench.



Remove the caliper bracket.



Clean the brake disk surface. Use a wire brush. Use WD-40 spray.



CLUB.AUTODOC.CO.UK 7-17







Unscrew the brake disc fastening. Use Torx T30. Use an impact screwdriver.



## Replacement: brake discs – BMW E46 touring. AUTODOC recommends:

• If necessary, use a rubber mallet.

Remove the brake disc.

21



Clean the hub. Use a wire brush. Treat the contacting surface. Use copper grease.



Move the parking brake shoes against the drum. Use a crowbar.



CLUB.AUTODOC.CO.UK 8-17







Install the brake disc.



Tighten the brake disc fastening. Use Torx T30. Use a torque wrench. Tighten it to 16 Nm torque.



Clean the brake caliper bracket from dirt and dust. Use a wire brush.



25 Install the brake caliper bracket.



CLUB.AUTODOC.CO.UK 9-17







Tighten the brake caliper bracket. Use a drive socket #16. Use a torque wrench. Tighten it to 65 Nm torque.



Clean the brake caliper bracket from dirt and dust. Use a brake cleaner.



#### **AUTODOC** recommends:

- Replacement: brake discs BMW E46 touring. After applying the spray, wait a few minutes.
- Treat the brake caliper piston. Use a brake cleaner.

#### **AUTODOC** recommends:

• After applying the spray, wait a few minutes.

CLUB.AUTODOC.CO.UK 10-17