






SIMILAR VIDEO TUTORIAL

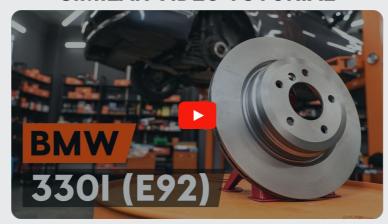

This video shows the replacement procedure of a similar car part on another vehicle

i Important!

This replacement procedure can be used for:

BMW 3 Touring (E91) 330i 3.0, BMW 3 Touring (E91) 330d 3.0, BMW 3 Touring (E91) 330xi 3.0, BMW 3 Touring (E91) 330xd 3.0, BMW 3 Touring (E91) 335i 3.0, BMW 3 Touring (E91) 335d 3.0, BMW 3 Touring (E91) 325d 3.0, BMW 3 Touring (E91) 335xi 3.0, BMW 3 Touring (E91) 330d xDrive 3.0, BMW 3 Touring (E91) 330i xDrive 3.0, BMW 3 Touring (E91) 335i xDrive 3.0, BMW 3 Touring (E91) 330 i

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: BMW 3 Coupe (E92) 330i 3.0

CLUB.AUTODOC.CO.UK 1–15







REPLACEMENT: BRAKE DISCS – BMW 3 TOURING (E91). LIST OF THE TOOLS YOU'LL NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- HEX bit No.H5.
- HEX bit No.H7.
- Drive socket # 17
- Wheel impact socket #17
- Brake caliper wind back tool

- Ratchet wrench
- Torque wrench
- Tap wrench
- Crow bar
- Impact screwdriver
- Rubber mallet
- Fender cover
- Wheel chock

Buy tools

CLUB.AUTODOC.CO.UK 2-15







Replacement: brake discs – BMW 3 Touring (E91). Tip from AUTODOC experts:

- Replace the brake disks on the car BMW 3 Touring (E91) in complete set for each axis. Regardless of the state of components. This will ensure even braking.
- The replacement procedure is identical for both brake disks on the same axle.
- When changing the brake discs, always replace the brake pads.
- Warning! Shut down the engine before starting any work BMW 3 Touring (E91).

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

- Open the bonnet.
- Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.
- Remove the wiper arm cover.



Unscrew the brake fluid reservoir cap.



CLUB.AUTODOC.CO.UK 3-15







- Secure the wheels with chocks.
- Loosen the wheel mounting bolts. Use wheel impact socket #17.



- Raise the rear of the car and secure on supports.
- Unscrew the wheel bolts.



Replacement: brake discs – BMW 3 Touring (E91). AUTODOC recommends:

- To avoid injury, hold up the wheel when unscrewing the bolts.
- Remove the wheel.



CLUB.AUTODOC.CO.UK 4-15







Remove the dust boot caps of the brake caliper guide pins. Use a crowbar.



Disconnect the brake pads wear sensor. Use a crowbar.



Please note!

- Some cars are not equipped with the brake pad wear sensor.
- Detach the brake caliper retaining spring. Use a crowbar.



Unscrew the brake caliper fastening. Use HEX No.H7. Use a ratchet wrench.



13

CLUB.AUTODOC.CO.UK 5-15







Spread the brake pads. Use a crowbar.



15 Remove the brake caliper.



Replacement: brake discs – BMW 3 Touring (E91). AUTODOC experts recommend:

- Tie the caliper to the suspension or to the body with a wire without disconnecting from the brake hose to prevent depressurization of the brake system.
- Make sure that the brake caliper is not hanging on the brake hose.
- Don't press the brake pedal after the brake caliper has been removed. As a result, the piston can fall out from the brake cylinder, and brake fluid leakage and depressurization of the system may occur.
- Check the brake caliper bracket, brake caliper guide pins and boots. Clean them. Replace, if necessary.

CLUB.AUTODOC.CO.UK 6-15








16 Remove the brake pads.



Clean the brake caliper bracket fasteners. Use a wire brush. Use WD-40 spray.

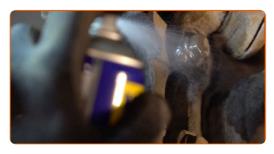

Unscrew the caliper bracket fastening. Use a drive socket #17. Use a tap wrench.



Remove the caliper bracket.

19



CLUB.AUTODOC.CO.UK 7-15







Clean the brake disc fasteners. Use a wire brush. Use WD-40 spray.



Unscrew the brake disc fastening. Use HEX No.H5. Use an impact screwdriver.



Remove the brake disc.

23



Replacement: brake discs – BMW 3 Touring (E91). Tip from AUTODOC:

• If necessary, use a rubber mallet.

Clean the hub. Use a wire brush. Treat the contacting surface. Use copper grease.

CLUB.AUTODOC.CO.UK 8-15







24 Install the brake disc.



Tighten the brake disc fastening. Use HEX No.H5. Use a torque wrench. Tighten it to 16 Nm torque.



Clean the brake caliper bracket from dirt and dust. Use a wire brush. Use a brake cleaner.



AUTODOC recommends:

- Replacement: brake discs BMW 3 Touring (E91). After applying the spray, wait a few minutes.
- Install the brake caliper bracket.



CLUB.AUTODOC.CO.UK 9-15







Tighten the brake caliper bracket. Use a drive socket #17. Use a torque wrench. Tighten it to 65 Nm torque.



Treat the brake caliper piston. Use a brake cleaner.



Replacement: brake discs – BMW 3 Touring (E91). Tip:

- After applying the spray, wait a few minutes.
- Press in the brake caliper piston. Use brake caliper wind back tool.



31 Install the brake pads.



CLUB.AUTODOC.CO.UK 10-15